OPERATION
AND
SERVICE MANUAL

Electronic Services - Los Angeles
MI4481X

[redacted]

Telonic® INDUSTRIES, INC.

BENDIX
20137-4

TELONIC INSTRUMENTS AND ACCESSORIES

Products manufactured by TELONIC INDUSTRIES, INC. are guaranteed against defective materials and workmanship for a period of one year (vacuum tubes and semiconductors excepted) from date of purchase. This warranty does not apply to instruments that have been altered, improperly handled or damaged in any way beyond our control.

Instruments must be examined immediately upon receipt, since claims for damage in transit will not be honored by the carrier unless prompt action is taken.

CHANGES IN SPECIFICATIONS

The right is reserved to change the published specifications of equipment at any time, and to furnish merchandise in accordance with current specifications, without incurring any liability to modify equipment previously sold.

RETURNING EQUIPMENT TO FACTORY

Factory service is available for repair and readjustment of this instrument. However, a description of the trouble should be forwarded FIRST, whereupon instructions for correcting the trouble OR authorization for returning the equipment will be given. This applies to all units, whether under warranty or not.

MODEL L-7 L-7M

SERIAL NO. A15764

PLUG IN OSCILLATOR

Telonic INDUSTRIES, INC. BEECH GROVE, INDIANA

CONTENTS

Page

SECTION I .. SPECIFICATIONS

SPECIFICATIONS 1

SECTION II .. OPERATING INSTRUCTIONS

TYPICAL SETUP 2
DRAWING OF FRONT PANEL 2
GENERAL 3
DRAWING OF REAR PANEL 3
DESCRIPTION OF REAR PANEL 3

SECTION III .. GENERAL DESCRIPTION

GENERAL 4
SWEEP OSCILLATOR 4
VARIABLE MARKER 4

SECTION IV .. CALIBRATION PROCEDURE

TYPICAL SETUP 6
GENERAL PROCEDURE 7
CHASSIS LAYOUT 8
CENTERING 9
SWEEP WIDTH 9
LINEARITY CHECK 10
B+ LIMIT 11
MAX and MIN LEVEL LIMIT (Control Chassis) 11
FLATNESS CHECK 11
VARIABLE MARKER 12

SECTION V .. MAINTENANCE

GENERAL PROCEDURE 13
EXTENSION CABLE 13
ACCESS TO RF COMPARTMENT 13
TROUBLE SHOOTING CHART 14

SECTION VI .. PARTS LIST

ABBREVIATION CODE 17
PARTS LIST FOR SWEEP OSCILLATOR SECTION 17
PARTS LIST FOR VARIABLE MARKER 18

SECTION VII .. SCHEMATIC DIAGRAMS

CONVERSION INFORMATION

Commencing with equipment shipped after about July 22, 1963, certain modifications have been incorporated in the Telonic SM-2000 plug-in series, and in the Telonic SM-2000 control chassis. These modifications may render the units incompatible with those previously shipped unless the earlier instruments are modified also. The equipment in which these modifications have been made can be identified by the letter "A" prefixed to the serial number.

Units not so identified must be modified if they are to be compatible with instruments now being shipped. The modifications to be made are listed below, divided into two groups - those to be made to earlier SM-2000's and those to be made to earlier plug-ins.

SM-2000 CHANGES

1. On J601, remove all wires presently connected to pin 8 and reconnect them at pin 7; remove the jumper between pins 7 and 8.

2. Using shielded wire, type RG-174/U or equal, connect pin 8 of J601 to the printed circuit board land which leads to pin 1, V303. Ground the shield by connecting it to a convenient ground land nearby.

3. Prefix the letter "A" to the serial number of the instrument.

PLUG-IN CHANGES

1. On P601 remove all wires presently connected to Pin 8 and reconnect them at pin 7; remove the jumper between pins 7 and 8 if one is connected.

2. Prefix the letter "A" to the serial number of the instrument, if none is prefixed.

Changing the serial number of the instrument is as important in the modification as are the electrical requirements, as the ability to identify a unit as having been or not having been modified is involved.

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_07891

SECTION I .. SPECIFICATIONS

MODELS L-5, L-6, L-7, L-5M, L-6M, and L-7M

INTRODUCTION

The L-5, L-6, and L-7 are plug-in sweep oscillator units for use with the Telonic Models SM-2000 and SM-2000-1 control chassis. These plug-ins utilize the special functions of the control chassis such as choice of sweep/retrace ratio, variable sweep rate, and manual or external sweep.

The L-5M, L-6M, and L-7M include a variable marker covering the entire swept frequency range. This difference is clearly indicated throughout the manual.

SPECIFICATIONS

	L-5, L-5M	L-6, L-6M	L-7, L-7M
CW AND SWEEP CENTER FREQUENCY RANGE	20-75 Mc	50-125 Mc	100-210 Mc*
SWEPT FREQUENCY RANGE	16-88 Mc	43-142 Mc	88-230 Mc*
SWEEP WIDTH	0.1-40%	0.1-30%	0.1-25%
OUTPUT VOLTAGE	1v r.m.s.	1v r.m.s.	0.75v r.m.s.
FLATNESS	±0.25 db	±0.25 db	±0.25 db
LINEARITY			
At sweep width indicated not over	- - - -	20%:1.2:1	10%:1.2:1
At maximum specified sweep width not over	1.2:1	1.5:1	1.5:1
VERNIER LEVEL CONTROL RANGE	0-6 db	0-6 db	0-6 db
VARIABLE MARKER (L-5M, L-6M, L-7M only)			
Frequency range	16-88 Mc	37-150 Mc	88-240 Mc
Accuracy	±0.35%	±0.25%	±0.25%

* When operating in the SM-2000

SECTION II .. OPERATING INSTRUCTIONS

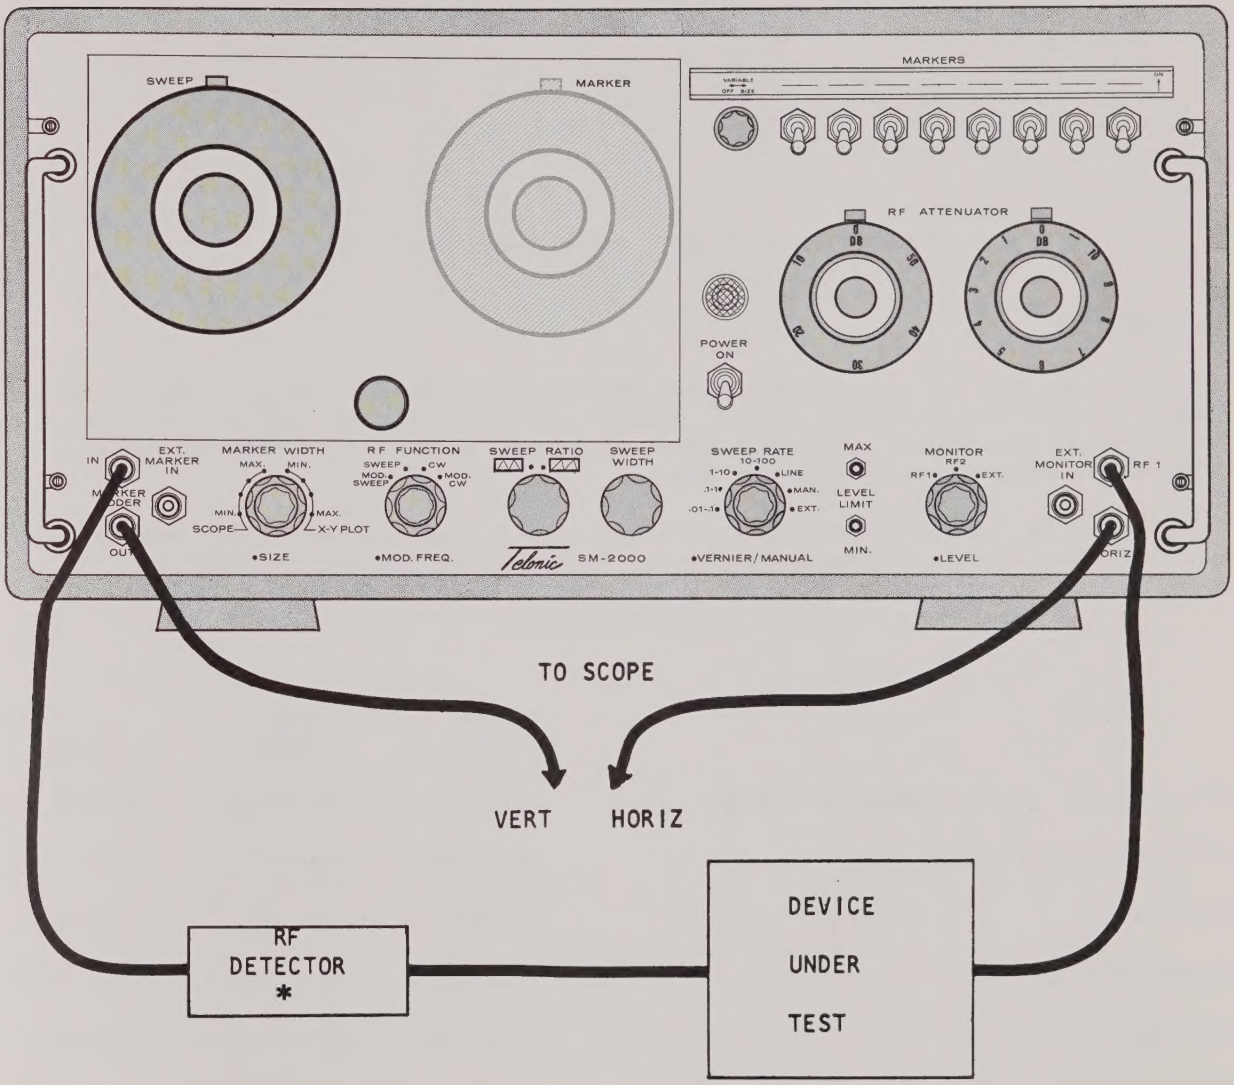

*The Telonic XD-3A or XD-8A is suitable for this use in a 50Ω system. The XD-4A or XD-9A is recommended in a 75Ω system.

DESCRIPTION OF FRONT PANEL

The front panel contains two controls (one only if variable marker is not installed).

SWEEP — The Sweep Dial, which sets the center frequency of the sweep oscillator by means of a variable capacitor.

MARKER — The Variable Marker Dial, calibrated in two ranges to cover the full range of the unit. This control also adjusts frequency with a variable capacitor.

GENERAL

1. Make sure the control chassis power is OFF before inserting the plug-in oscillator into the control chassis. If the power is ON, transient voltages may damage diodes in the units. Insert plug-in oscillator and secure it in the chassis by tightening the fastening rod with the knob in the lower center of the front panel.

2. Make connections to the scope (or recorder), the device under test, and RF Detector as shown. All connectors located on the sweep generator are BNC type and it is recommended that RG cable be used for all connections. This insures good ground connection between the devices and minimizes hum, radiation from the unit, and pickup of spurious external signals. The cable that is used to connect RF 1 to the device under test should match the impedance of the sweep generator, or else a matching network should be used to insure a constant input signal.

3. Refer to the manual for the control chassis for additional instructions.

4. To insure proper operation refer to Section IV (CALIBRATION PROCEDURE). NOTE: To insure a constant amplitude signal, the LEVEL LIMIT MAX and MIN controls on the control chassis should be set as prescribed in Section IV of this manual. This adjustment varies with the individual plug-in oscillator.

5. Proceed in accordance with recommendations of the manufacturer of the device under test concerning alignment, adjustment, and tests.

DRAWING OF REAR PANEL

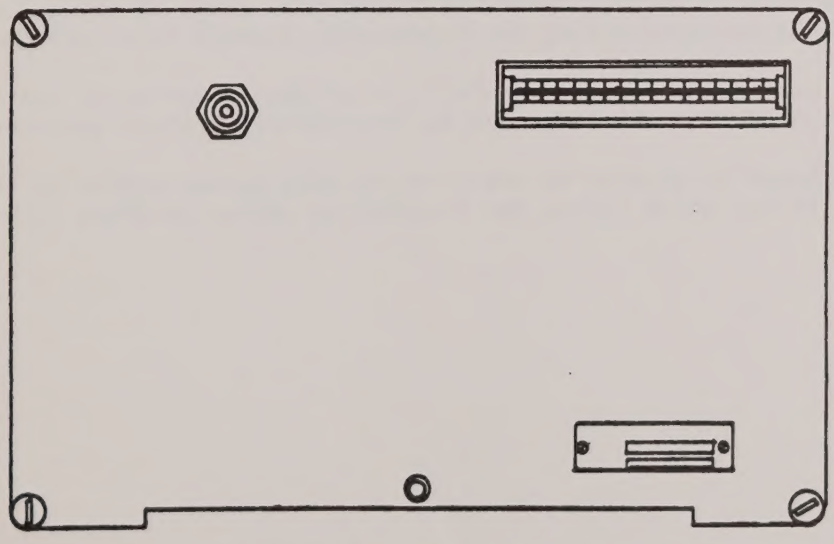

DESCRIPTION OF REAR PANEL

The two electrical connectors on the rear panel are:
A BNC plug, which mates with a BNC jack on the control chassis. This is the RF output connector.

A 32-contact plug which makes the other electrical contacts necessary through a mating socket on the control chassis.

SECTION III .. GENERAL DESCRIPTION

SWEEP OSCILLATOR

The sweep oscillator is a modified Colpitts circuit.

The frequency is swept with a triangular or sawtooth drive (from the control chassis) to a saturable reactor which controls the inductance in the oscillator tank circuit. The oscillator tank capacity is controlled by the front panel SWEEP frequency dial.

The output is leveled by a signal from the control chassis as explained in the manual for that unit.

VARIABLE MARKER (L-5M, L-6M, and L-7M only)

The variable marker is derived from heterodyning the fundamental or harmonic frequencies of a variable oscillator and the sweep oscillator. Each marker dial is calibrated over two ranges. The outer range represents the fundamental band of the variable oscillator, which is somewhat less than that of the sweep oscillator. The inner scales are calibrated at twice the fundamental, and the two scales together extend over the full swept range.

The diode mixer circuit which combines the signals from the two oscillators is also an effective harmonic generator. Thus there will be harmonics of both the sweep oscillator output and the variable c-w oscillator output present. In the upper part of the swept range the second harmonic of the c-w signal combines with the fundamental swept signal to produce the birdy. Over the fundamental range of the c-w oscillator the birdy is produced by heterodyning the fundamental signals from both oscillators.

The mixer circuit has been optimized carefully to produce a marker of approximately constant amplitude over the full range and to discriminate against spurious markers.

The output of the mixer is coupled to the birdy-by-pass marker system on the control chassis through a filter which limits the frequencies passed to those required for a birdy marker.

SECTION IV .. CALIBRATION PROCEDURE

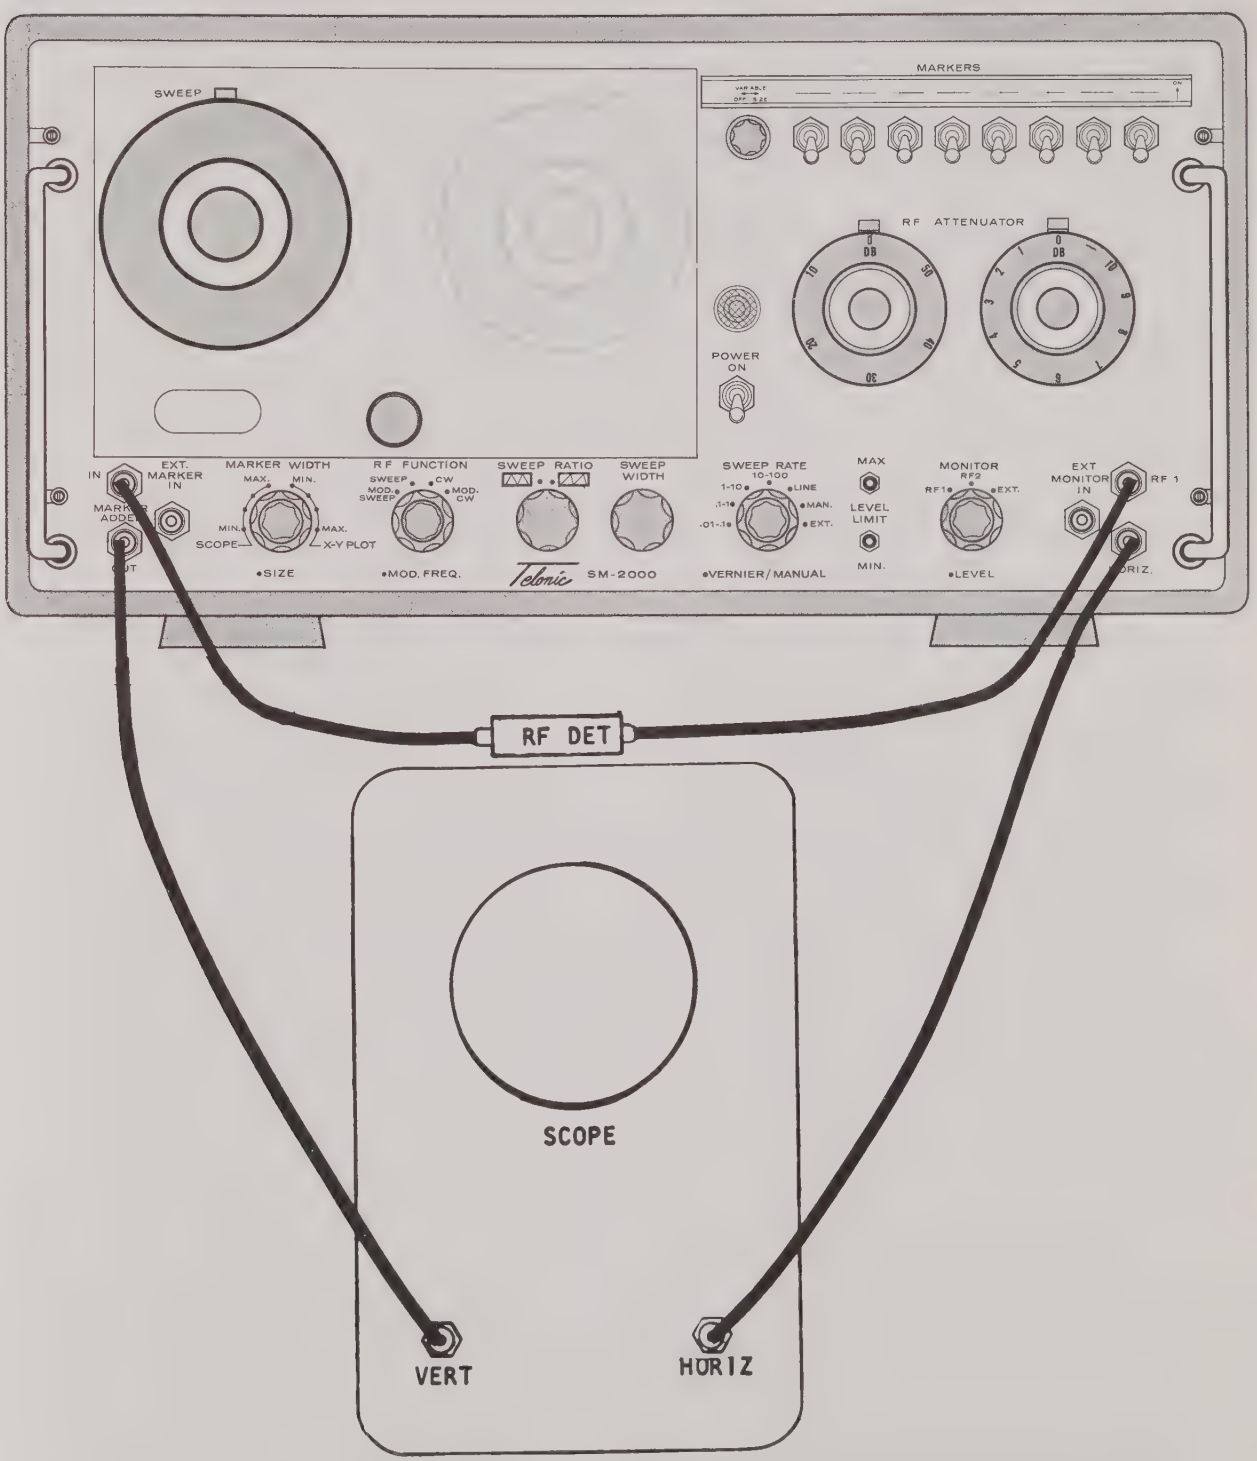

TYPICAL SET UP

2541L
3/64

GENERAL

The following procedure should be applied after changing any component in the plug-in, or at any time the calibration is noted to be incorrect.

Complete calibration of the plug-in involves adjustment of three different classes of controls.

Those located in the plug-in which affect the operation of the control chassis.

Those located in the plug-in and affecting plug-in functions only.

Those located in the control chassis which affect the operation of the plug-in.

The latter class of controls is discussed in the manual for the control chassis. The others are treated here.

NOTE: Although preliminary adjustments may be made with the cover removed from the oscillator section, final adjustment requires that the cover be in place. Holes are provided in the box for access to C802 and L801. See chassis layout on next page for location of access holes.

TEST EQUIPMENT REQUIRED:

In addition, crystal-controlled harmonic markers, such as the Telonic "CDH" series, are required. A CDH-10 and a CDH-1.0 are recommended for the L-5 and a CDH-50, CDH-5.0 and CDH-2.0 for the L-6 and L-7.

PROCEDURE

1. Make connections as shown on page 6. Observe the instructions contained in Section II concerning type of cable.

2. With power OFF, insert the plug-in and secure it in place.

3. Turn power ON, allow a 15 minute warmup period, and make adjustments as outlined.

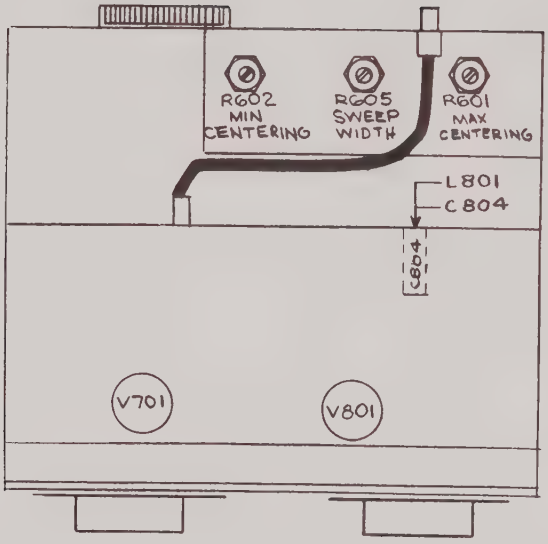

CHASSIS LAYOUT
TOP VIEW

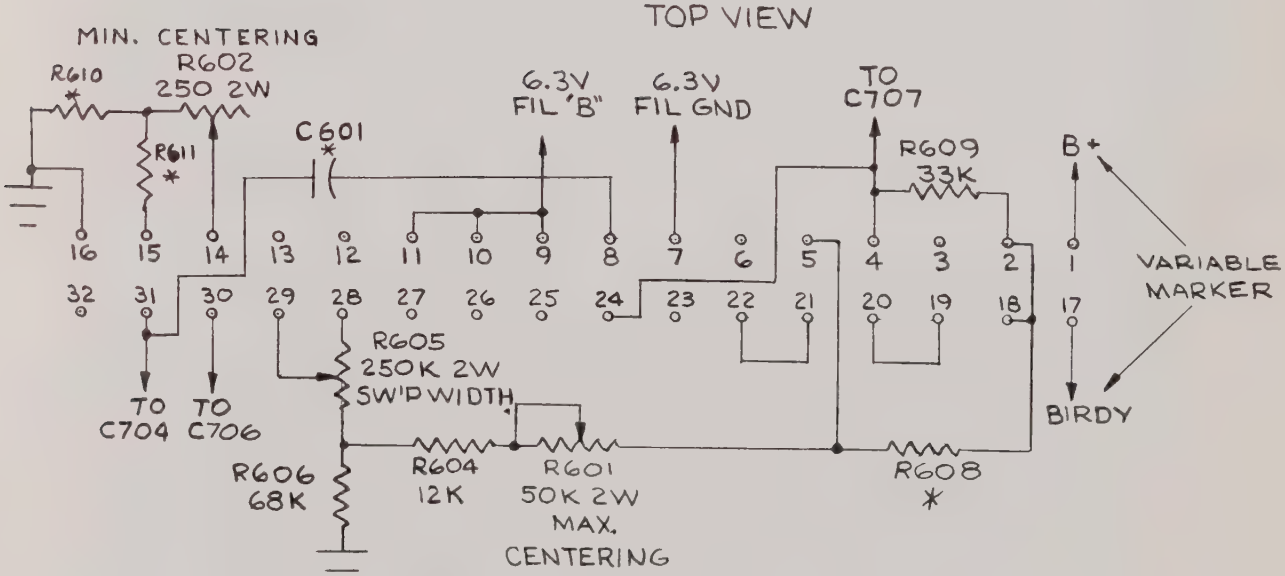

P601

MIN CENTERING (Adjustment)

The MIN CENTERING is set for optimum dial accuracy at minimum sweep width.

Set the front panel SWEEP WIDTH control near minimum. Turn on the 10-Mc harmonic marker for the L-5, or the 50-Mc marker for the L-6 and L-7. Turn off the variable and all other markers.

Set the SWEEP dial on the L-5 to 20 Mc or on the L-6 or L-7 to 100 Mc.

Locate the harmonic marker corresponding to the SWEEP dial setting and adjust MIN CENTERING to center the marker on the trace. Decrease the sweep width slowly to minimum, maintaining the center of the marker in the center of the trace with the MIN CENTERING control.

Similarly check the dial at other frequencies of interest adjusting MIN CENTERING to divide errors if necessary. If preferred, this control may be set instead to provide best dial accuracy at a critical frequency.

MAX CENTERING (Adjustment)

This control is set for equal sweep on each side of center frequency. Rotate the front panel SWEEP WIDTH control fully clockwise.

Set the SWEEP dial on the L-5 to 50 Mc, on the L-6 to 100 Mc, or on the L-7 to 160 Mc. Turn on the 1-Mc harmonic marker for the L-5, or the 5-Mc marker for the L-6 or L-7. Be sure all other markers are turned off (the 10-Mc or 50Mc marker may be used to identify the 1-Mc or 5-Mc harmonics, then turned off).

Adjust MAX CENTERING so that the marker corresponding to the dial setting is centered on the trace.

SWEEP WIDTH (Adjustment)

This adjustment is set to provide the specified maximum sweep width. These plug-ins have an esentially constant percentage of sweep width over the full range, and the frequency at which the sweep width adjustment is made can be chosen for a convenient marker display.

Leave the controls set as above. When the plug-in SWEEP WIDTH control is set properly, there will then be 21 markers on the L-5 display, 7 on the L-6, or 9 on the L-7. Alternately adjust the sweep dial and sweep width control until the two outer markers are at the exact ends of the trace. See photographs on following page.

NOTE: The SWEEP dial is calibrated at minimum sweep width and, at the conclusion of this adjustment, may not read the exact frequency originally set.

Now readjust MAX CENTERING, then MIN CENTERING, as above if necessary to recalibrate this mark on the SWEEP dial.

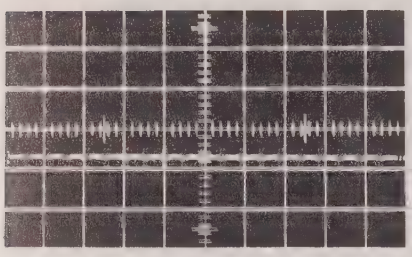

L-5

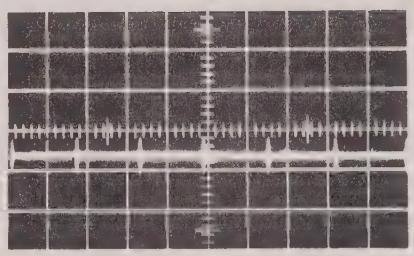

L-6

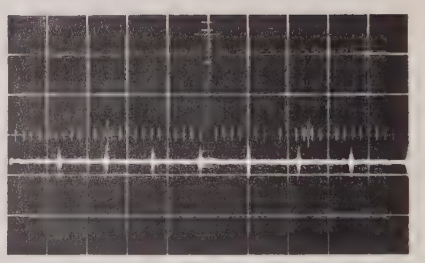

L-7

LINEARITY

Linearity measurements are made over the center 80% of the display at maximum sweep width.

With other controls set as above turn on the 5-Mc harmonic marker for the L-7, the 2-Mc harmonic markers for the L-6, or the 1.0-Mc harmonic markers for the L-5. Turn off all other markers. Set the SWEEP dial for a center frequency which will allow 10 marker intervals to occupy the full trace and adjust the horizontal gain of the oscilloscope for a 10 cm trace.

Locate the shortest and longest marker interval in the center 80% (8 cm) of the oscilloscope trace. Readjust the horizontal gain of the oscilloscope so that the shortest interval occupies exactly 1 cm. See photograph on the left below.

Adjust the position of the trace so that the longest marker interval begins on a graticule line and measure the length of the interval. See photograph on the right below.

Its length in centimeters indicates the linearity ratio: a length of 1.15 cm for the longest marker interval represents a linearity of 1.15:1.

Linearity can be checked at other sweep widths, such as 40%, by analogous methods using either the same or other harmonic markers.

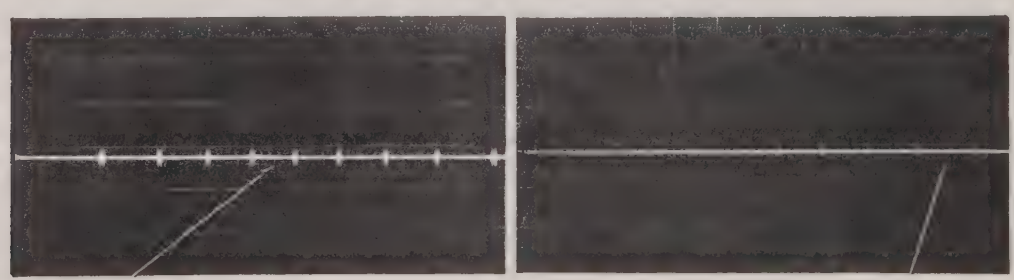

Shortest marker interval

Longest marker interval

LEVEL LIMIT (MAX and MIN) CONTROL CHASSIS

Preset the following controls:

Control Chassis
- LEVEL fully clockwise
- SWEEP WIDTH fully clockwise
- MONITOR in RF 1 position
- SWEEP RATE to maximum
- SWEEP RATIO to

L-5
- SWEEP Dial to position which yields minimum output

Set the output level at exactly 1v rms with the MAX LEVEL LIMIT. Considering the efficiency of the XD-3A at this level and frequency, 1.0v rms corresponds to an XD-3A DC output of about 1.1v.

Insert fixed attenuation, not to exceed 6 db, in an amount equal to the desired range of the LEVEL Control and note the output level.

Reset RF ATTENUATORS to 0 db, and rotate the LEVEL Control fully counter-clockwise. Adjust MIN LEVEL LIMIT for the same output noted with 6 db fixed attenuation.

FLATNESS CHECK

Flatness is measured over the entire swept range of the L-5; in this range, the minimum output must be not more than 0.5 db lower than the maximum output at any frequency setting.

Preset the following controls:

- SWEEP WIDTH fully clockwise
- RF LEVEL fully clockwise
- All markers OFF
- MONITOR SELECTOR to RF 1

NOTE: Be sure that LEVEL MAX and MIN Controls are adjusted as prescribed in the manual for the control chassis.

Rotate the SWEEP Dial through its calibrated range, noting the maximum and minimum outputs.

Compare the difference between these outputs with the reduction in output resulting from the insertion of 1 db attenuation. The difference between the maximum and minimum must be no greater than half the change caused by the 1 db attenuation.

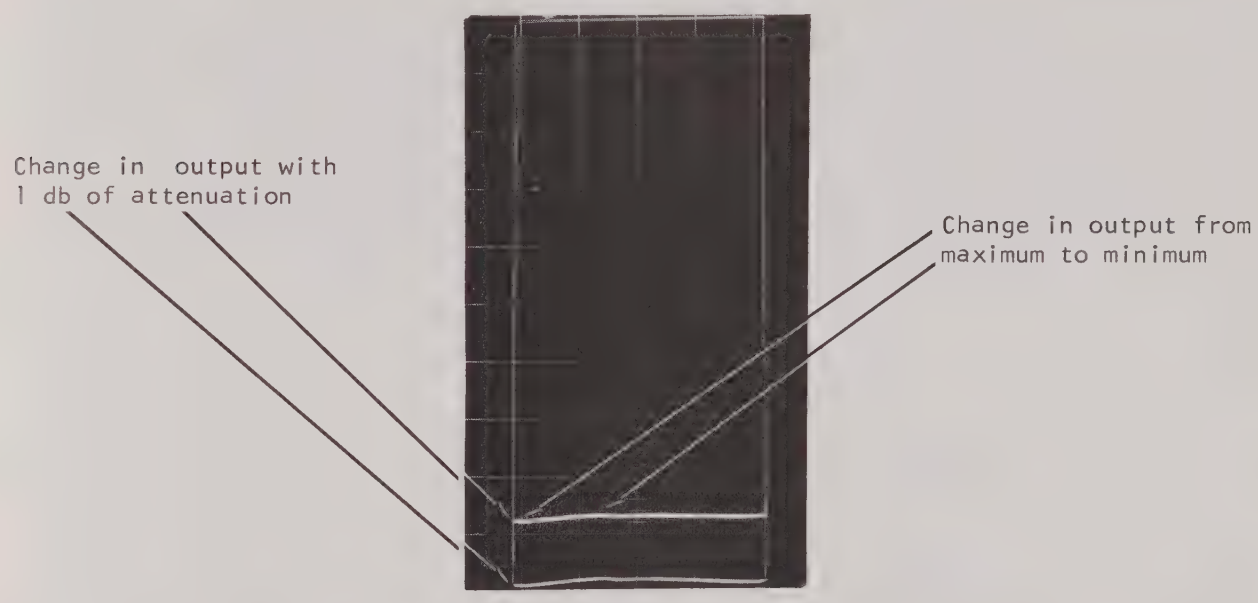

VARIABLE MARKER (Adjustment)

This procedure is provided primarily to restore the dial accuracy after a component in the marker circuit is changed.

NOTE: Refer to chassis layout on page 8 for location of C802* and L801. These adjustments are made with the cover ON.

Preset the following controls:

Control Chassis
SWEEP WIDTH to approximately 10%
LEVEL to maximum
50-Mc or 10-Mc Marker ON
5-Mc or 1-Mc Marker ON

Plug-in
SWEEP Dial and MARKER Dial to the lowest frequency calibrated on outer scale of MARKER Dial.

*C802 IS THE CIRCUIT REFERENCE SYMBOL FOR THE TRIMMER CAPACITOR IN THE L-5 AND L-6. THIS PART IS C804 IN THE L-7.

Adjust L801 to superimpose the variable marker over the crystal-controlled marker at this frequency.

Reset the plug-in SWEEP and MARKER dials to the highest frequency calibrated on the outer scale of the MARKER dial.

Adjust C802* to superimpose the variable marker over the crystal-controlled marker at this frequency.

Repeat the above procedures until the markers are superimposed at each end of the frequency range each time the dials are set as prescribed. If preferred, dial errors can be divided over the full range instead, or a critical frequency can be favored with best accuracy.

SECTION V
MAINTENANCE

GENERAL PROCEDURE

Since this model is a plug-in unit, many of the possible malfunctions of the oscillator are the result of part failure in the control chassis. The connections at P601 of the plug-in and at J601 of the control chassis afford a convenient means of tracing the source of troubles to the oscillator or chassis.

In locating troubles which have been traced to the oscillator, application of the common rules of electronic maintenance, including a visual check for damage, open filaments, glowing anodes, shorted tuning capacitors, and charred resistors, is an obvious measure. All connectors, particularly P601 and J601, should be checked for cleanliness.

EXTENSION CABLE

For maintenance work requiring access to parts located on the under side of the plug-in, or in other areas not easily reached, an extension cable may be obtained from Telonic Industries, Inc. This cable, having the 32-contact plug on one end and the 32-contact jack on the other, allows the plug-in to be removed from the control chassis and operated on the bench.

ACCESS TO R-F COMPARTMENT

There are four unlacquered screws on the cover to the r-f compartment. Only these. should be removed in taking off the cover.

The lacquered screws hold the shield in place and have nothing to do with securing the cover.

The following chart will be of service in deciding control chassis. It is assumed that the procedures jumpers on P601 are intact. Where "inconclusive"

SYMPTOM	CHECK (on P601)
Weak or no output or unleveled output	DC voltage at Pin 31 with RF LEVEL fully clockwise
No sweep width	1. Voltage waveform, Pin 14 to ground.
	2. Next - resistance between Pins 14 and 15, 28 and 29, 30 and 4 with plug-in removed.
Changing sweep width also changes center frequency	Resistance from Pin 28 to Pins 5, 29, and 16 with plug-in removed.
No variable marker	1. For birdy at Pin 17
	2. DC voltage at Pin 1

If the chart shows that the trouble probably is in the control chassis, refer to the Maintenance Section of the manual for that unit.

If the trouble appears to be in the plug-in, the following chart may be of assistance in localizing the failure:

SYMPTOM	CHECK
Weak or no output or unleveled output	V701 and associated circuitry. Continuity from Pin 31 of P601 to Pin 1, 6, or 7 of V701.
No sweep width	Check R602, R603, R605, and L701A.
Changing sweep width changes center frequency	Check R601, R604 and R606 first for open, second for changed value.
No variable marker	Check V801 and associated circuitry, including sweep sample line. Change diode in mixer circuit and check other mixer components.
Weak Marker	Diode in mixer circuit. V801 and associated circuitry. Sweep sample line. If markers on one range are considerably more prominent than those on another, substitute diodes to optimize all.
Spurious Markers	Check mixer diode and change if necessary. Be sure diode is inserted with correct polarity.

whether a trouble lies in the oscillator or
on Page 13 have been applied and that the
is shown, the next step should be followed.

IF RESULT IS	TROUBLE PROBABLY IN	
	OSCILLATOR	CONTROL CHASSIS
High 100-175v	x	
Low or zero 0-100v		x
Sawtooth or triangular waveform 0V or DC voltage	x Inconclusive - see check #2	
Open on any check	x	
Continuity		x
Open on any check	x	
Continuity		x
Birdy present		x
No birdy	Inconclusive - see check #2	
100V	x	
Low or no voltage		x

SCHEMATIC PART DESIGNATION

C Capacitor
CR Semiconductor diode
J Jack
L Inductor
P Plug
R Resistor, Fixed or Variable
V Tube

SCHEMATIC VALUE ABBREVIATION

Ω ohms
K 1,000 kilohms
M 1,000,000 ohms (megohms)
µf Microfarad
pf Picofarad
µh Microhenry
mh Millihenry

OTHER ABBREVIATIONS

F.P. Front Panel
R.P. Rear Panel
T.P. Test Point

RESISTORS - All resistors are 1/2 watt, ± 10%, and are shown in ohms, unless otherwise specified.

CAPACITORS - All capacitors are shown in picofarads (pf) unless otherwise specified.

COILS - All inductors are shown in microhenries (µh) unless otherwise specified.

CIRCUIT REFERENCE SYMBOL - LOCATION INFORMATION

601 - 699 Interconnecting elements
701 - 799 Sweep Oscillator
801 - 899 Variable Marker

* Indicates value of component adjusted at factory, and may deviate from value shown on print.

SECTION VI .. PARTS LIST

PARTS LIST (L-5, L-6, L-7)

CIRCUIT REF.	DESCRIPTION	TELONIC PART NO.
C601	CFC (SC)	NA
C701		
L-5	CFCF, 1000pf, +100-0%, 500VDCW	C-110
L-6	CFCF, 1000pf, +100-0%, 500VDCW	C-110
L-7	CVA, 40pf	C-424
C702		
L-5	Feedthru, low-capacity	MP-42
L-6	Same as C701	
L-7	CFC, 15pf, ±10%, 1000VDCW	C-7
C703		
L-5	Same as C701	
L-6	Same as C701	
L-7	CFCF, 1000pf, +100-0%, 500VDCW	C-110
C704		
L-5	Same as C701	
L-6	CVA, 90pf	C-440
L-7	Same as C703	
C705		
L-5	Not used	
L-6	Same as C701	
L-7	Not used	
C706		
L-5	Not used	
L-6	Same as C701	
L-7	Same as C703	
C707		
L-5	CVA, 450pf	C-435
L-6	Same as C701	
L-7	Same as C703	
C708		
L-5	Same as C701	
L-6	Same as C701	
L-7	Same as C703	
C709		
L-5	Same as C701	
L-6	Not used	
L-7	Same as C703	
C710		
L-5	Same as C701	
L-6	Not used	
L-7	CFC, 5pf, ±10%, 1000VDCW	C-4
C711		
L-5	Same as C701	
L-6	Not used	
L-7	Same as C703	
J701	RJ, BNC	J-7
P601	Plug, 32-contact	S-39
P701	PC, UG-88B/U	J-32
P702	PC	J-27
L701		
L-5	Reactor, saturable	09102
L-6	Reactor, saturable	09162
L-7	Reactor, saturable	09105
L702		
L-5	Not used	
L-6	IF, 25 μh	L-113
L-7	IF, 2.2 μh	L-100
L703		
L-5	IF, 2.2 μh	L-100
L-6	IF, 2.2 μh	L-100
L-7	Not used	
L704 (L-7 only)	IF, 4.7 μh, ±10%	L-105
L705 (L-7 only)	IF, 2.2 μh, ±10%	L-101
L706 (L-7 only)	Same as L705	
R601	RVC, 50KΩ, 2W	R-751
R602	RVC, 250Ω, 2W	R-771
R603	Not used	
R604	RFC, 12KΩ, ±10%, 1/2w	R-119
R605	RVC, 250KΩ, 2w	R-752
R606	RFC, 68KΩ, ±5%, 1/2W	R-51
R60[illegible]		
L-5	SC	
L-6	SC	
L-7	Not used	
R608	SC	
R609	RFC, 33K[illegible], ±10%, 1/2W (SC)	R-36
R610	SC	
R6[illegible]		
L-5	Not used	
L-6	Not used	
L-7	SC	
R701		
L-5	RFC, 2.2KΩ, ±10%, 1/2W	R-20
L-6	RFC, 2.2K[illegible], ±10%, 1/2W	R-20
L-7	RFC, 8.2K[illegible], ±10%, 1/2W	R-43
R702		
L-5	RFC, 39K[illegible], ±10%, 1/2W	R-26
L-6	RFC, 39K[illegible], ±10%, 1/2W	R-26
L-7	RFC, 5.6Ω, ±5%, 1/2W	R-[illegible]
R703		
L-5	RFC, 5.6[illegible], ±10%, 1/2W	R-32
L-6	RFC, 5.6[illegible], ±10%, 1/2W	R-32
L-7	Not used	
R704		
L-5	Same as R703	
L-6	Same as R703	
L-7	RFC, 39K[illegible], ±10%, 1/2W	R-[illegible]
V701		
L-5	TE, 6ES8	VT-52
L-6	TE, 6ES8	VT-52
L-7	TE, 6DZ4	VT-51

VARIABLE MARKER PARTS LIST (L-5M, L-6M, L-7M ONLY)

CIRCUIT REF.	DESCRIPTION	TELONIC PART NO.
C801	CVA, 140pf	C-422
C802		
L-5M	CVC, 8.5pf	C-409
L-6M	CVC, 8.5pf	C-409
L-7M	CFC, 75pf, ±10%, 1000VDCW	C-12
C803		
L-5M	CFC, 15pf, ±10%, 1000VDCW	C-7
L-6M	CFC, 20pf, ±10%, 1000VDCW	C-8
L-7M	Same as C802	
C804		
L-5M	CFC, 0.01μf, +80-20%, 500VDCW	C-20
L-6M	Same as in L-5M	
L-7M	CVC, 8.5pf	C-409
C805		
L-5M	CFCF, 1000pf, +100-0%, 500VDCW	C-110
L-6M	Same as in L-5M	
L-7M	CFC, 15pf, ±10%, 1000VDCW	C-7
C806		
L-5M	Same as C805	
L-6M	Same as C805	
L-7M	CFC, 0.01μf, +80-20%, 500VDCW	C-20
C807		
L-5M	Same as C805	
L-6M	Same as C805	
L-7M	CFCF, 1000pf, +100-0%, 500VDCW	C-110
C808		
L-5M	Same as C805	
L-6M	Same as C805	
L-7M	Same as C807	
C809		
L-5M	Same as C805	
L-6M	Same as C805	
L-7M	Same as C807	
C810		
L-5M	Same as C805	
L-6M	Same as C805	
L-7M	Same as C807	
C811		
L-5M	Same as C805	
L-6M	Same as C805	
L-7M	Same as C806	
C812		
L-5M	Not used	
L-6M	CFC, 150pf, ±10%, 500VDCW	C-145
L-7M	Same as C807	
C813		
L-5M	Not used	
L-6M	CFC, 200pf, ±10%, 1000VDCW	C-16
L-7M	Same as C807	
CR801	DS, 1N82	D-1
L801		
L-5M	IV	09112
L-6M	IV	09145
L-7M	IV	34006
L802	IF, 55 μh	L-108
L803		
L-5M	IF, 4.7 μh, ±10%	L-105
L-6M	Same as in L-5M	
L-7M	IF, 2.2 μh	L-100
L804	IF, 2.2 μh, ±10%	L-101
R801	RFC, 2.2KΩ, ±10%, 1/2W	R-20
R802 (L-7M only)	RFC, 51Ω, ±5%, 1/2W	R-3
R803		
L-5M	RFC, 220Ω, ±10%, 1/2W	R-39
L-6M	RFC, 51Ω, ±5%, 1/2W	R-3
L-7M	Not used	
R804	Not used	
R805		
L-5M	RFC, 8.2KΩ, ±10%, 1/2W	R-43
L-6M	Same as in L-5M	
L-7M	RFC, 3.3KΩ, ±10%, 1/2W	R-70
R806		
L-5M	RFC, 47KΩ, ±10%, 1/2W	R-27
L-6M	RFC, 10K[illegible], ±10%, 1/2W	R-73
L-7M	Same as in L-6M	
V801	TE, 6DZ4	VT-51

ABBREVIATION CODE

CFC	Capacitor, fixed, ceramic
CFCF	Capacitor, fixed, ceramic feedthru
CVA	Capacitor, variable, air
CVC	Capacitor, variable, ceramic
IF	Inductor, fixed
IV	Inductor, variable
NA	Not assigned
PC	[illegible]
RFC	[illegible]
RJ	[illegible]
RVC	[illegible]
SC	[illegible]
TE	[illegible]

SECTION VII

SCHEMATIC DIAGRAMS

2771L
4/64

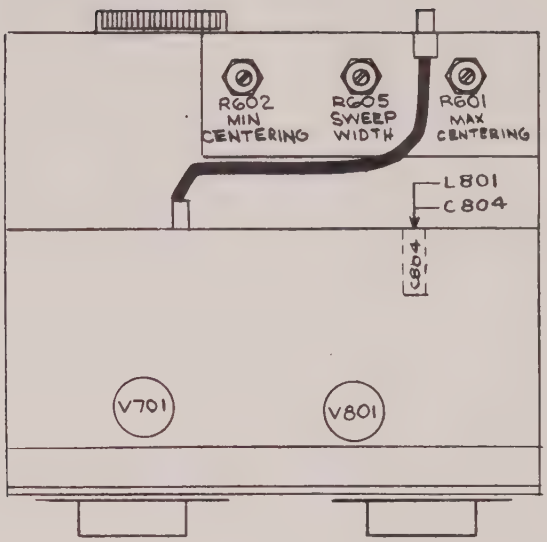

CHASSIS LAYOUT
TOP VIEW

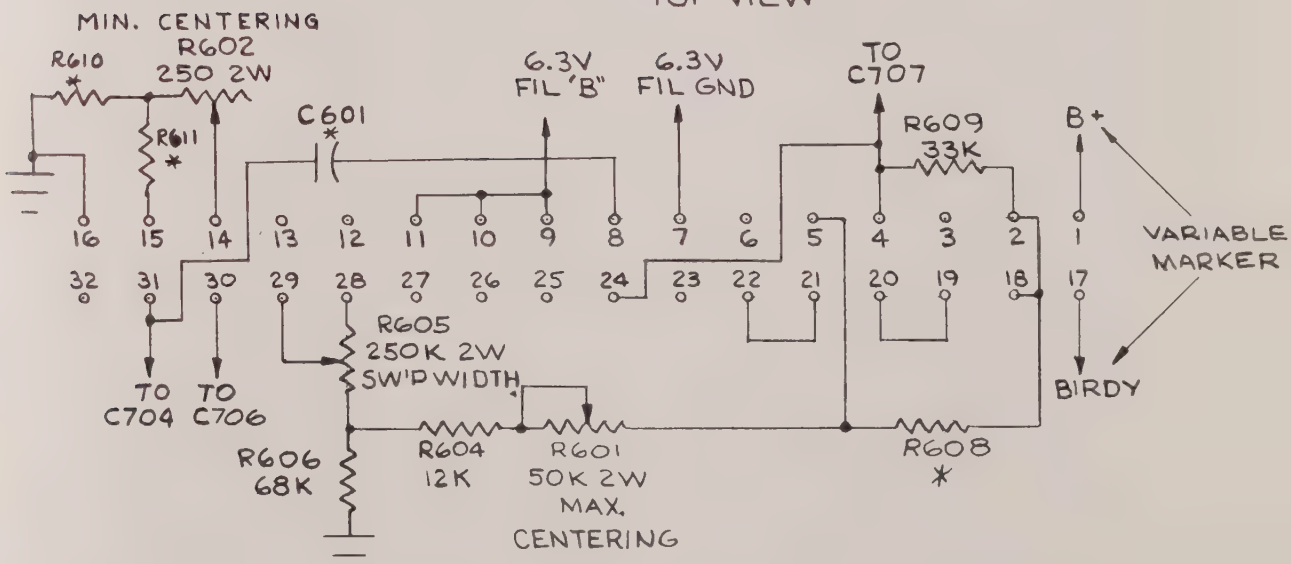

P601

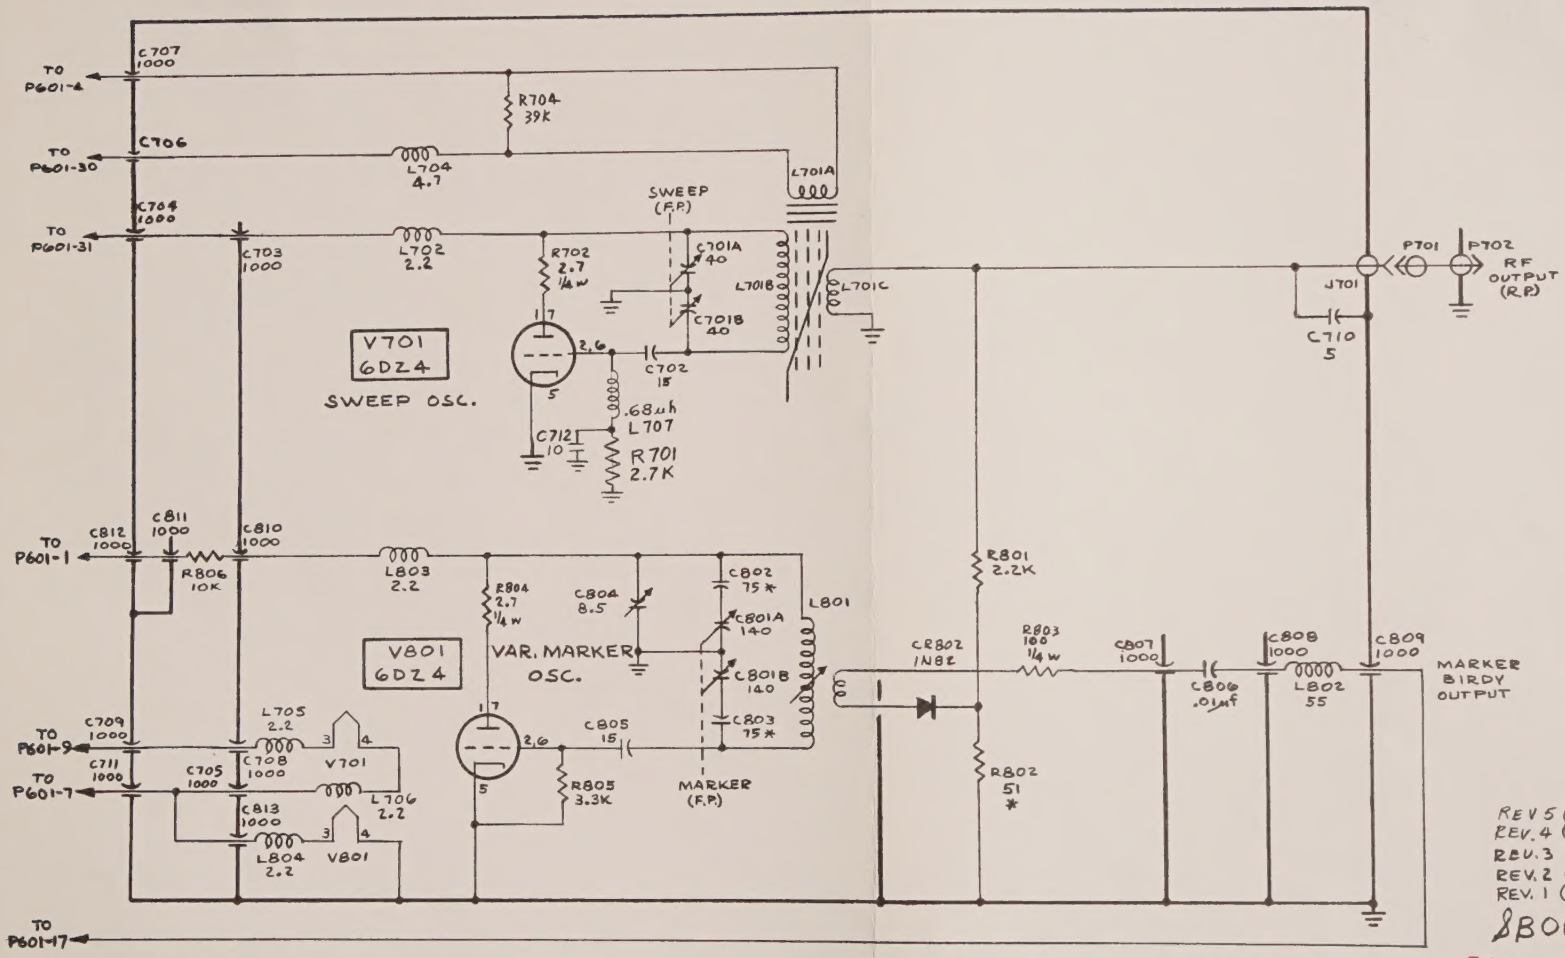

REV 5 (7-28-65) ECN 1092
REV. 4 (1-8-65) ECN 861
REV. 3 (4-28-64)
REV. 2 (3/24/64)
REV. 1 (5/17/63)

SB003-0082 L-7M

Tube types 6AF4A and 6DZ4 are used interchangeably in this instrument. The 6DZ4 is Telonic Part No. VT-51.

L-7M Addr

PRODUCTION CHANGES

TELONIC MODEL L-7M

The following changes to this equipment are effective with units shipped on or after date shown.

CIRCUIT	CHANGE	DATE
Control Board	Replace R604 with a direct connection.	7-30-64
Variable Marker	Add R803, RFC, 100 Ω, ±10%, 1/4 W, Telonic Part No. R-1421, in series with the secondary of L801.	7-30-64
	Add R804, RFC, 2.7 Ω, ±10%, 1/4 W, Telonic Part No. R-1429, in series with the plate of V801.	7-30-64
Sweep Osc. Sch.	Change R-701 from (8.2 K, R-43) to (2.7 K, R114)	ECN 1042
	Add L707 .68 μh (Telonic L103)	ECN 1042
	Add C-712 10 Discap (Telonic C-6)	ECN 1042